

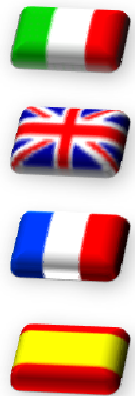


emergency

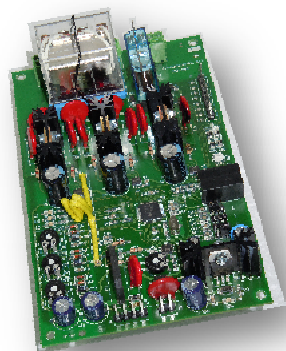

Dispositivo di emergenza per ascensori Automatic Rescue Device for elevators Dispositif de remise au niveau pour ascenseurs Aparatos rescatadores para ascensores	SERIE – SERIES	
	43/EMD	
UTILIZZO Use - Utilisation - Empleo	EMD25	EMD40
Per ascensori con motore principale asincrono trifase fino a: <i>For lift with three-phase asynchronous hoist motor up to:</i> <i>Pour ascenseurs avec moteur triphasé asynchrone jusqu'à:</i> <i>Para ascensores con motor principal asíncrono trifásico hasta:</i>	9 KW / 380 V 6 KW / 220 V	16 KW / 380 V 12 KW / 220 V
Velocità dell'ascensore fino a: <i>Lift speed up to:</i> <i>Vitesse ascenseur jusqu'à:</i> <i>Velocidad ascensor hasta:</i>	≤ 3 m/sec	
DATI TECNICI Technical data – Données techniques – Datos técnicos	EMD25	EMD40
Logica di controllo <i>Control logic</i> <i>Logique de contrôle</i> <i>Lógica de control</i>	Micro	
Tipo visualizzazione a bordo <i>On board visual signalling type</i> <i>Type d'affichage à bord</i> <i>Tipo de visualización a bordo</i>	Display	

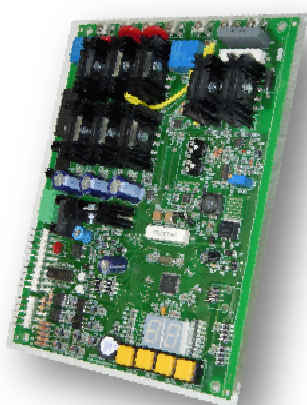

DATI TECNICI

Technical data – Données techniques – Datos técnicos

	EMD25	EMD40
Sistema per le regolazioni <i>Adjustement system</i> <i>Système de réglage</i> <i>Sistema para los ajustes</i>	Tasti Keys Touches Teclas	
Regolazioni remote (distanza massima) <i>Remote adjustment (max distance)</i> <i>Règlages à distance (max distance)</i> <i>Ajustes remotos (distancia máxima)</i>	N/A	
Riporto al piano imposto <i>Evacuation to designated floor</i> <i>Remise à l'étage fixé</i> <i>Rescate a piso impuesto</i>	①	
Tensione nominale di funzionamento <i>Rated working voltage</i> <i>Tension nominale de fonctionnement</i> <i>Voltaje nominal de funcionamiento</i>	48 V	
Tensione nominale inverter trifase <i>Rated voltage of three-phase inverter</i> <i>Tension nominale onduleur triphasé</i> <i>Voltaje nominal inverter trifásico</i>	48 V	
Massima corrente inverter monofase <i>Max single phase inverter current</i> <i>Courant maximum onduleur monophasé</i> <i>Corriente máxima inverter monofásico</i>	20 A A	
Massima corrente inverter trifase <i>Max three-phase inverter current</i> <i>Courant maximum onduleur triphasé</i> <i>Corriente máxima inverter trifásico</i>	25 A	40 A
Frequenza di alimentazione del motore principale <i>Feeding frequency of hoist motor</i> <i>Fréquence alimentation moteur principal</i> <i>Frecuencia de alimentación motor principal</i>	2,0 ÷ 6,0 Hz Automatic system	
Capacità nominale batterie <i>Rated capacity battery</i> <i>Capacité nominale batteries</i> <i>Capacidad nominal baterías</i>	7,2 Ah	18 Ah
Massima corrente di carica <i>Max charging current</i> <i>Courant maximum de charge</i> <i>Máxima corriente de carga</i>	1 A	
Protezione da sovraccarico sulle correnti massime <i>Protection against overcharge of maximum current</i> <i>Protection contre surcharge des maximum courants</i> <i>Protección contra sobrecargas de corrientes máximas</i>	●	
Protezione da corrente minima o mancanza di fase <i>Protection for minimum current of phase failure</i> <i>Protection contre courant minimum ou manque de phase</i> <i>Protección contra corriente mínima o falta de fase</i>	●	
Protezione per minima tensione di batteria <i>Protection for minimum voltage of battery</i> <i>Protection pour tension minimale de batterie</i> <i>Protección por mínimo voltaje de batería</i>	●	
Protezione da aumenti improvvisi di velocità <i>Protection against unexpected overspeed</i> <i>Protection contre accélérations imprévues</i> <i>Protección contra aceleraciones imprevistas</i>	●	
Massime dimensioni di ingombro (cm) <i>Max. overall dimensions (cm)</i> <i>Dimensions maximales d'encombrement (cm)</i> <i>Dimensiones máximas de embarazo (cm)</i>	41 x 18 x 38 Contenitore batterie a parte – Without cabinet for batteries - Armoire pour batteries pas foumi – Sin armario baterías	

① Ulteriori limiti sulla potenza massima – Suitable for limited power - Ultérieures limites sur la puissance – Límites en la potencia máxima



emergen zamatic S.r.l.

Passaggio dell'Airone, 10 – Zona Ind.le – 90040 Isola delle Femmine (Palermo) - ITALY
Tel. +39 091 8935011 - Fax +39 091 8935022
e-mail: info@emergen zamatic.it